


---

14-5-2018

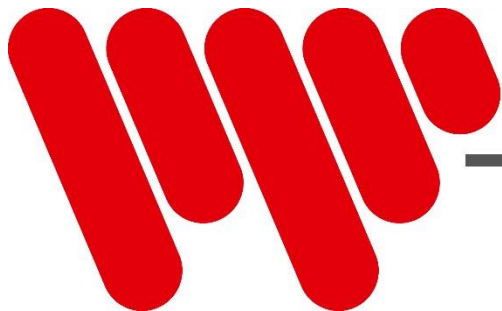

# WESSELING BV

---

Quality since 1958

## Simplex

USER'S MANUAL AND MAINTENANCE GUIDE



CE

## CONTENTS:

<b>1. General information</b>	<b>2</b>
- Manufacturer	- 2
- Equipment intended use and description	- 2
- storage	- 2
- Symbols	- 2
<b>2. Special warnings and use restrictions</b>	<b>3</b>
<b>3. Use</b>	<b>3</b>
- Starting up	- 3
- Setting up and adjustments	- 3
- Transportation and brakes	- 5
<b>4. Use en setting up accessories</b>	<b>5</b>
<b>5. Cleaning and conservation</b>	<b>6</b>
<b>6. Maintenance</b>	<b>7</b>
- Preventive maintenance	- 7
- Corrective maintenance	- 7
- Spare parts	- 7
<b>7. Troubleshooting</b>	<b>8</b>
<b>8. Technical data sheet</b>	<b>9</b>
<b>9. Warranty</b>	<b>10</b>
<b>10. Service record</b>	<b>10</b>

## 1. GENERAL INFORMATION

### EQUIPMENT INTENDED USE AND DESCRIPTION

The Simplex tables are intended for research and treatment of pati By making use of the different options, this table is very multifunctional. The entire frame is provided with a durable epoxy coating and the upholstered parts are covered and covered with synthetic leather. The head / back section can be adjusted with a gas spring. The gas spring can be operated by a lever located on one side of the table. It is optional to turn / place the gassing to the desired side. A table with wheels is provided with separately braked wheels.




### STORAGE

When storing, the following conditions must be met:




1. Relative humidity 10% / 90 % - temperature -10°C / +50°C

### SYMBOLS

The various symbols appearing in this manual and on the equipment itself are meant to draw the user's attention on important safety warnings and useful information. Please observe all warning, caution and hazard notices.

	<b>WARNING</b> Warning messages are used to advise users/patients about any risk of injury or danger if the specified procedures and conditions are not carefully observed during operation or maintenance activities.
	<b>ELECTRIC SHOCK HAZARD</b> This warning symbol identifies operating/maintenance instructions or procedures which, if not observed, could result in a risk of electric shock
	<b>CAUTION</b> Caution symbols are used to advise users about an operation or maintenance procedure, best practice or condition that may damage the equipment if not duly complied with.

**2. SPECIAL WARNINGS AND USE RESTRICTIONS**

	<p><b>Equipment must not be used:</b></p> <ul style="list-style-type: none"> <li>• Without knowing the user’s manual.</li> <li>• When the safety load exceeds the stated capacity.</li> <li>• Without the patient being monitored.</li> <li>• When the patient and/or equipment is not stable enough.</li> <li>• When table is not on its feet when stopped, during treatment, or when patient is moved to/from other equipment.</li> <li>• When the original product has been tampered with and/or modified from its original configuration.</li> <li>• When the controls and/or components are even only partially faulty or defective.</li> <li>• When incorrectly configured or when you think it may cause damage to a patient or user.</li> <li>• Do not allow any body parts to enter the areas with moving components and/or controls.</li> </ul>
	<ul style="list-style-type: none"> <li>• Do not connect to an electric system that does not comply with the current safety regulations.</li> <li>• Never spill liquid of any kind on the electric equipment.</li> <li>• Always unplug the mains power supply before working on any electrical parts or to move the equipment.</li> <li>• Do not damage the electric cables: avoid crushing; do not pull out the cable to disconnect, etc.</li> <li>• Electric cables should be checked regularly to see if they are damaged. In case of doubt, have them replaced.</li> </ul>
	<ul style="list-style-type: none"> <li>• Foam rubber and plastic components may burn if they come in contact with naked flames.</li> <li>• Corrosive and/or abrasive detergents may damage the covers and paintwork.</li> <li>• The equipment is not suitable for use outdoors and/or in surfaces that are not smooth enough.</li> <li>• UV and heat therapy lamps may damage the upholstery covering.</li> </ul>
<p><b>!!!!!!!!!!!! NEVER LEAVE THE TABLE UNATTENDED WHEN THERE IS A PATIENT ON IT !!!!!!!!!!!!!</b></p>	





**3. USE**

**STARTING UP**

For packaging reasons the couch is supplied covered by protective means that are to be removed, avoiding direct contact with cutters that could damage it. Any damage in transit must be reported to the transporter and seller immediately, without using the equipment for safety reasons.

**SETTING UP AND ADJUSTMENTS**

The Simplex must be mounted on location. The legs should be inserted into the underside of table part and then fixed. The rod for the paperroll holder comes between the legs. The Back/head section is equipped with a gas spring and this is already mounted

ADJUSTMENT/FUNCTION	CONTROL	PROCEDURE
		<p>To adjust the head-/back sections pull the control handle, and support the section as it moves. Release the handle to secure the position. The control handle is located on one side of the table and can be placed right or left</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">  <p><b>WARNING</b></p>  </div> <ul style="list-style-type: none"> <li>• With the patient’s weight on the section, activate the control handle only when you are sure that the entire load is supported.</li> <li>• Movement of the adjustable sections may cause pinching in the vicinity of the hinges.</li> </ul>



4. USE AND SETTING UP OPTIONS

With the use of the optional accessories this table can be used for multiple treatments.

<p><b>PAPSIM: Paperrolholder Simplex</b></p> 		<p>The paper holder is always mounted on between the leg of the Simplex. The maximum roll width that fits into holder is 45cm</p> <p>Placing a roll of paper:</p> <ul style="list-style-type: none"> <li>• Turn the knob and pull the rod out of the holder.</li> <li>• Place the paper roll in the holder and push through the rod.</li> <li>• Tighten the knob to hold the rod in place.</li> </ul>
<p><b>LAZYFOAM: Lazyfoam</b></p> 		<p>The standard parts are filled with polyether and are about 55mm thick. When the optional Lazy Foam is chosen the total thickness is 70mm. The upholstered sections will not only be thicker but also softer and therefore more comfortable for patients who need to be longer on the table.</p>
<p><b>MASK003: Neckcushion with velcro strap</b></p> 		<p>This neck pillow ensures that the patient can sit/lie comfortably. The cushion has an elastic strap on the rear with Velcro closure. This is to position the cushion at almost every place. The cushion has a size of 58x18x9cm. The cover on the back is also equipped with a zipper and thus removable.</p>
<p><b>BREEDTE00: Different width 70cm</b></p> 		<p>The standard width of a Simplex is 64cm. If this is not wide enough, the table can be optionally expands to 70cm. The length of the table will therefore not change.</p>

**5. CLEANING and CONSERVATION**

For durable joy with the leather material, please clean regularly. For cleaning use a cloth or soft brush dampened using water and a neutral detergent. Any stains on the upholstery should be promptly removed with colourless ethyl alcohol diluted in 20% water. Rinse well.

 **WARNING** 

- ENSURE THE COUCH IS PERFECTLY CLEAN BY DISINFECTING THE SYNTHETIC LEATHER AND APPLYING A SINGLE-USE PAPER SHEET AT EVERY USE.
- HARSH DETERGENT PRODUCTS MAY DAMAGE THE SURFACES.
- DO NOT USE STEAM JETS, WASHING TUNNELS, WATER JET CLEANERS OR HIGH PRESSURE WASHERS

**6. MAINTENANCE**

Maintenance operations must be carried out by technicians who are familiar with the contents of this instruction booklet. Check the equipment is safe after any instances of "rough handling" (e.g. fall, bumps, etc.) and any time you are in doubt about safety.



**ROUTINE MAINTENANCE**

Routine maintenance operations must be carried out with the frequency indicated in the table.

FREQUENCY	ACTIVITY
Every 6 months or at least once a year	General equipment cleaning.
	Visual and functional inspection of the equipment and related hydraulic and manual controls.
	Frame and mechanical parts: Check screws and bolts are tight; state of wear of bushings and pins, presence of tears and deformations or damages.
	Oil leaks from the piston and/or gas springs must only be in the form of minor lubrication residue.
	Check that the adjustable sections are stable and do not give way when the control lever is released.
	Brake control: check regular functioning of the activating device and the efficiency of the brakes.
	Wheels: these must be securely fixed and in good condition, rolling smoothly and with their treads free of impediments.
	During use and operation, make sure there are no unusual sounds, vibrations or oscillations that may indicate actuator and/or mechanism malfunctions.
At the end of the activities above, complete the inspection performing a lift cycle with the stated maximum safe load.	

**NON-ROUTINE MAINTENANCE**

For safety reasons and to avoid invalidating the guarantee, no component may be opened or handled for repair. Any faults on the hydraulic piston, the gas springs and the wheel system must be diagnosed by Wesseling BV, who will organize the most suitable action.

 **WARNING** 

- IF SAFETY SEEMS TO BE AT RISK, DISABLE THE EQUIPMENT IMMEDIATELY PREVENTING ANY POSSIBILITY OF USE UNTIL SUCH RISK HAS BEEN REMOVED.
- PLEASE RECORD ANY DEFECTS/DAMAGES/SERVICES THAT ARE IMPORTANT FOR THE SAFETY OF THE EQUIPMENT IN THE APPROPRIATE FORM HEREWITH ENCLOSED.

**SPARE PARTS**

Only use original spare parts from Wesseling. Please contact Wesseling BV for the parts you might need.

## 7. TROUBLESHOOTING

DIRECT E-MAIL FOR TECHNICAL OR USERS ASSISTANCE:

[info@wesseling-bv.com](mailto:info@wesseling-bv.com)

If you rather want to speak to one of us on the phone you can call: +31-20 497 5183



Please note:

- Before contacting for service or help, please identify the "SERIAL NUMBER" in the product label attached to the equipment (see example above), or the transport document/invoice number. This will speed things up and improve service quality.

The equipment was tested in very stringent conditions. During testing no specific breakages or faults occurred. If the equipment fails to operate, please follow the troubleshooting process below.

Issue	Cause	Solution
Adjustment of the head-/back section doesn't work or the position is not maintained	Gas spring faulty or incorrectly set	Contact Wesseling BV
	Transmission cable damaged or broken	

## 8. TECHNICAL DATA SHEET

Product name	Simplex
Product code	SIM0001
Safe working load	200kg
Height	75cm
Sections adjusted by gas spring	1
Head-/back section	0° to +85°
Adjusting gas springs	By lever on one side of the table
Casters	Ø125mm (optional)
Braking system	Separate braked wheels (optional)
Equipment weight	± 30kg
Length	196cm
Width	64cm of 70cm (optional)
Upholstery thickness	± 55mm of 70mm (optional)
Filling	Polyether SG 90/30
Semi Leather	Standard artificial leather, Original SKAI® or STAMSKIN

